



# Single Pro™ Wet/Dry Vacuum System


## ASSEMBLY INSTRUCTIONS

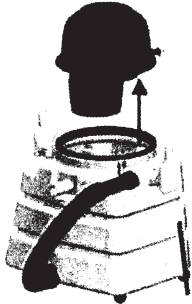


1. Remove the vacuum motor from the vacuum tank. Then, remove parts from within the tank.

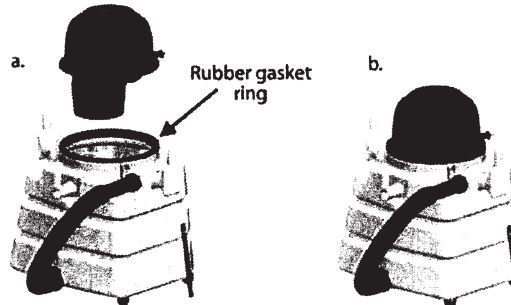

2. (a) Make sure that the rubber gasket ring is properly located on the vacuum tank. (b) Then, place the vacuum motor on the tank as shown and secure the latches.



3. (a) Assemble the 2-piece Vacuum Wand and (b) attach the Squeegee Head Brush.

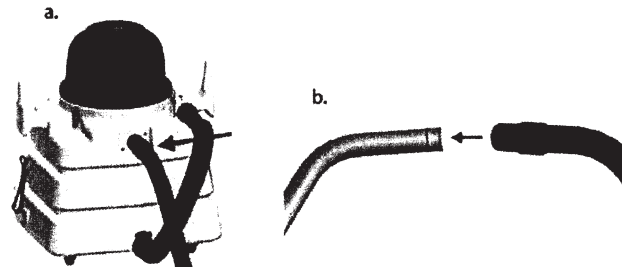


4. (a) Attach one end of the 50-foot vacuum hose to the port on the vacuum tank. (b) Attach the other end of the hose to the vacuum wand.


**dbi**<sup>TM</sup>  
**D. BROCK**  
**INDUSTRIES**

# Single Pro™ Wet/Dry Vacuum System


## OPERATING INSTRUCTIONS

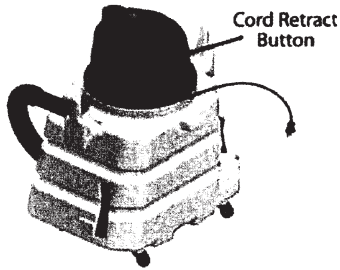


1. Pull the retractable electric cord to the desired length, and plug into an electrical outlet. To retract the cord, press the Cord Retract Button. NOTE: Be careful not to extend the electrical cord beyond the red marker.

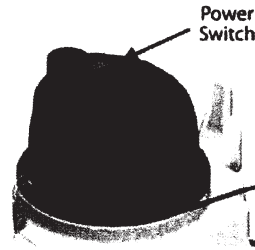

2. To turn the vacuum ON, flip the power switch to the ON position.

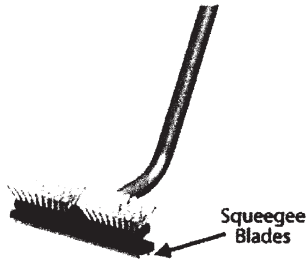


3. While the vacuum is ON, begin vacuuming. For optimal suction, make sure the rubber squeegee blades are perpendicular to and always making contact with the floor.

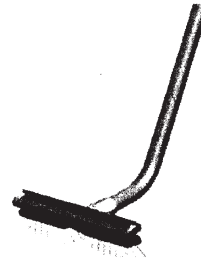

4. If brushing is needed, flip the squeegee head over so that the bristles are facing the floor. When finished brushing, flip the squeegee head back over and continue vacuuming.



5. When finished vacuuming, leave the vacuum motor running while wrapping the vacuum hose around the vacuum motor. Then, press the Cord Retract Button until cord is fully retracted.

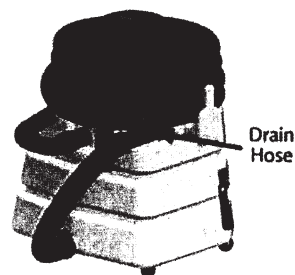

6. To drain the vacuum tank, unscrew the drain hose and lower to a floor drain.

**dbi**<sup>TM</sup> **D. BROCK**  
INDUSTRIES


# IMPORTANT SAFETY INSTRUCTIONS

**CAUTION:** To reduce the risk of injury, read operating instructions carefully before using.

**▲ WARNING: RISK OF ELECTROCUTION ▲**

- Read instruction manual before using.
- This appliance is provided with double insulation. Use only identical replacement parts. See instructions below for Servicing of Double-Insulated Appliances.
- Inspect cord before using – do not use if cord is damaged.
- Keep all connections dry and off the ground.
- Do not touch plug with wet hands.
- Do not close a door on the cord or pull the cord around sharp edges or corners.
- Keep the cord away from heated surfaces.
- Do not apply liquid from the appliance onto electrical outlets or on any electrical devices.
- Turn off the unit before unplugging.
- Do not pull on the cord to unplug. Grasp the plug at the outlet and pull.
- When dry vacuuming, do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible materials.
- If using an extension cord with the appliance, make sure the connection is above the floor and away from exposure to liquid.

## SERVICING OF DOUBLE-INSULATED APPLIANCES

A double-insulated appliance is marked with one or more of the following: The words "DOUBLE INSULATION" or "DOUBLE INSULATED" or the double insulation symbol  (square within a square).

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace.

**Personal Protective Equipment (PPE):** It is recommended to wear proper personal protective equipment as required by the chemical product label instructions used in conjunction with the appliance.

**FOR INDOOR USE ONLY**

© 2012 KAIVAC, INC. ALL RIGHTS RESERVED.



# Single Pro™ Wet/Dry Vacuum System

## MAINTENANCE

Item	Procedure
<b>Floor Squeegee Tool</b>	The condition of this tool is very important to the performance of the OmniFlex Vacuum. The floor should be nearly dry after vacuuming. Regularly check the condition of the rubber squeegee blades and wheels on the underside of the tool. If streaking occurs or if there are signs of wear, replace immediately. NOTE: Rough floor surfaces will cause the blades and wheels to wear out more quickly. Replace as necessary.
<b>Vacuum Tank</b>	Empty and flush vacuum tank after each use. Regularly check the deflector to make sure there are no blockages. Clean and disinfect weekly.
<b>Vacuum Motor Head</b>	Check the float shutoff foam filter regularly (weekly recommended). If dirty, remove and clean. After removing the foam filter, check the float shutoff screen for blockages and clean if necessary. A blocked screen or foam filter will restrict airflow and reduce suction.
<b>Leaks</b>	Be alert for leaks around hoses, fittings, tanks or elsewhere. Discontinue use until leaks are repaired.
<b>Electrical System</b>	Electric cord must be regularly inspected for tears or cuts in the insulation. If tears or cuts are found repair immediately.

## TROUBLESHOOTING

Area	Problem	Possible Cause	Solution
<b>Electrical</b>	No power to vacuum motor	Machine not plugged in	Plug machine in to outlet
		Switch not "ON "	Check if switch is "ON "
		GFCI on Pump Box tripped (only if connected to Pump Box)	Test or reset GFCI (if vacuum plugged into Pump Box)
		Building circuit overloaded	Plug vacuum into different circuit and reset the building circuit breaker
	Switch wires or connections loose on Pump Box (only if connected to Pump Box)	Disconnect power and check for loose wires under control panel of Pump Box	
	Electrical burning smell	Vacuum motor brushes worn or motor jammed	Remove vacuum motor and repair or replace.

© 2012 KAIVAC, INC. ALL RIGHTS RESERVED.

**TROUBLESHOOTING (CONTINUED)**

<b>Dump System</b>	Dump hose will not empty	Dump hose cap not removed	Remove cap
		Clog in tank near dump hose connection	Remove vacuum motor and remove clog
	Dump hose leaks	Dump hose cut	If leak is less than 4" from tank, cut and reattach, or replace
		Dump hose clamp loose	Tighten hose clamp
		Dump hose cap not locked in	Ensure dump hose cap is locked
<b>Vacuum System</b>	No or weak vacuum	Vacuum tank is full	Empty vacuum tank
		Squeegee blades or wheels worn down	Replace
		Float shutoff foam filter or screen is dirty	Clean foam filter and screen
		Float ball is stuck	Tap float to release
		Damaged hose	Repair damaged hose
		Dump hose cap is missing	Contact distributor to replace
		Bad seal between vacuum head and tank.	Reseat vacuum head and securely latch down
		Gasket Ring missing	Replace Gasket Ring
		Clogged vacuum hose or deflector	Check deflector and vacuum hose for clogs and clear
		Too much liquid in vacuum hose	Allow air in when vacuuming
		Vacuum hose still wrapped	Unwrap vacuum hose fully when vacuuming
		Leak in vacuum tank	If repairable, clean and dry affected area and seal with silicone.
	Moisture coming out from motor exhaust	Vacuum tank full	Empty vacuum tank
		Float shutoff ball, screen, or foam filter missing	Replace

### TROUBLESHOOTING (CONTINUED)

		Float ball not sealing properly	Clean ball
		Excessive foam in vacuum tank	Use defoamer
<b>Blow Dry System</b>	No air flow	Blow hose not locked in properly	Reconnect and lock in
	Moisture coming out nozzle	Water in Blow Hose	Dry out Blow Hose
		Moisture coming out from motor exhaust	Refer to "Vacuum System, Moisture coming out from motor exhaust" Troubleshooting
<b>Squeegee Vacuum Tool</b>	Floor streaks	Worn blades or wheels	Replace
	Tool does not rotate easily in wand	Brass ring on wand is not in groove	Loosen wand coupling nut and reposition so ring is in groove
		Coupling nut too tight	Loosen a 1/2 turn
	Tool won't stay on wand	Coupling nut cracked	Replace
		Brass ring is worn out	Replace
	Premature blade wear	Wheels worn out or missing	Replace
	Sucks to the floor too tightly	Wheels worn out or missing	Replace

